



PACIFIC MODERN HOMES, INC.
HOW TO PROPERLY STORE YOUR FRAMING PACKAGE

P.O. Box 670, ELK GROVE, CA 95759-0670
PHONE: (916) 685-9514 FAX: (916) 685-1306
INFO@PMHI.COM WWW.PMHI.COM

We take pride in the quality of our framing packages and our packages are built in a controlled environment for quality control. Proper storage of your materials is critical to maintaining their integrity, thus ensuring that they will stay in the same condition as when they were delivered.

PANELS: Cover all panel pallets which are not being used immediately with plastic (or tarps) and secure. This will protect the panels from the elements. All doors, loose windows, hardware, etc., must be removed prior to wrapping the panels (both first floor and second floor, as applicable) until they are ready to be installed.

DOORS: Remove all doors from the panel pallets and store in an area protected from the elements. Doors should be stood upright with full support under the door sill for storage. Do not lean against door corner. Leave any protective materials intact.

WINDOWS: All loose windows need to be stored in an area protected from the elements. Windows should be stood upright with full support under the window for storage. Please refer to the window directions below for more specifics. On each window there is a notation for which side should be facing up. The storage area must be shaded and cool. There are proper storage instructions listed on the window label, please review for further information. Please leave any protective materials intact.



PACIFIC MODERN HOMES, INC.
HOW TO PROPERLY STORE YOUR FRAMING PACKAGE

P.O. Box 670, ELK GROVE, CA 95759-0670
PHONE: (916) 685-9514 FAX: (916) 685-1306
INFO@PMHI.COM WWW.PMHI.COM

Milgard Vinyl Window & Door Additional Instructions:

1. Store in shaded area on flat base. Do not lean against a corner.
2. Do not drop or strike with a hammer.
3. Do not lift by top of frame only.
4. Protect the vinyl sill from traffic and damage. Provide **FULL** support under door sill.
5. Install with **FULL** support under the window sill, by resting flat on sill plate or place a thick shim that runs the window width.
6. **DO NOT USE EXPANDING FOAM** around vinyl units. This will bow the frame and window will not operate properly.
7. Keep siding 1/8" back from vinyl frame. Caulk gap.


Windows installed in the panels have a protective covering tacked in place. Please leave this material covering the windows intact. This protects the windows and neutralizes temperature changes.

LOOSE MATERIALS: Please remove the hardware inventory from the panel pallets. Properly store all hardware items until use. Cover all trusses, sheathing, siding and lumber that are not being used immediately with plastic (or tarps) and secure. This is to protect them from the moisture and/or heat that can warp and/or bow the materials.

- Keep siding covered, off the ground on a clean, flat and level surface that is protected from direct exposure to weather.
- Carry lap/soffit/panel siding by its narrow edge.



- Never install siding that is wet.

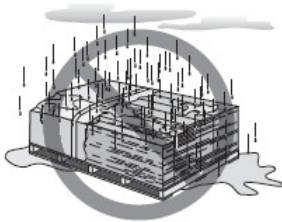

All material claims must be turned in immediately. Please notify your Dealer of any discrepancies or problems upon learning of the issue.